

ERASING Chapter

4

Erasing Files	92
Erase Single Image	92
Erase All Images	93
Erase Selected Images	94

Erasing Files

This section explains how to erase recorded files. There are three ways to erase files:

- 1) ERASE SINGLE IMAGE for erasing one selected file at a time.
- 2) ERASE ALL IMAGES for erasing all files at once.
- 3) ERASE SELECTED IMAGES for erasing multiple selected files.








- Files cannot be restored once they are erased. Before starting to erase a file, make sure that you want to erase it.

 
 


- Files on a write-protected SmartMedia memory card cannot be erased unless the write protect pad is removed from the card. See “Protecting Against Accidental Writing” → (p.27).
- Only files that have been taken with this camera can be erased.
- Erasing time may vary depending on the capacity of the SmartMedia memory card and the type of file.

Erase Single Image

The selected file is erased.

- 1 Set the mode dial to [] and press the  button to select the erase source.
- 2 Press the  button.
- 3 Press the  or  button to select [ERASE SINGLE IMAGE] and press the ENTER button.

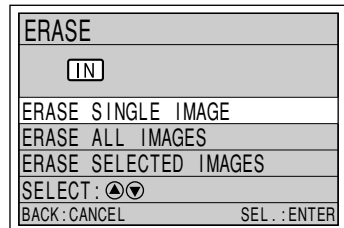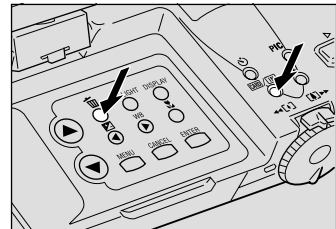


- ④ Press the ▲ or ▼ button to select the file to be erased and press the shutter release button.

The selected file will be erased. To erase more files, repeat step ④.

- ⑤ Press the CANCEL button.

 The display will return to the erase menu.

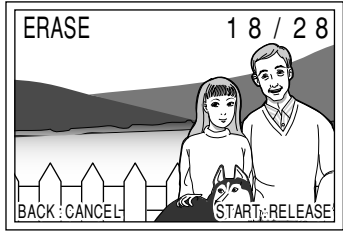


- Note**
- When a file is erased, the subsequent file numbers are reassigned.
 - Protected files, which are identified by the 🔒 mark, cannot be erased until they are unprotected. See “Protecting a File” → (p.85).

Erase All Images


All recorded files in the folder are erased.

- ① Set the mode dial to [] and press the **CARD/IN** button to select the erase source.

 - ② Press the **🗑️** button.

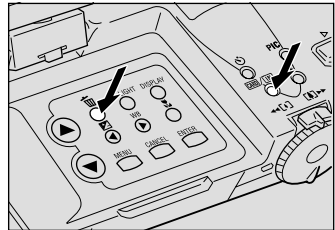


 - ③ Press the ▲ or ▼ button to select [ERASE ALL IMAGES] and press the ENTER button.

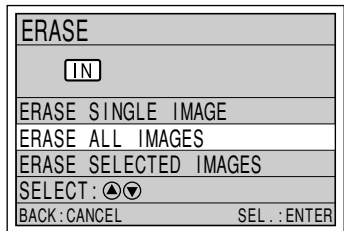

- ④ Press the shutter release button.

 
All the files will be erased and the display will return to the erase menu.

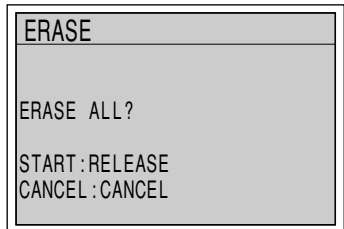



- Note**
- Protected files, which are identified by the 🔒 mark, cannot be erased until they are unprotected. See “Protecting a File” (p.85).

 
Erase Selected Images

Multiple selected files are erased.


❶ Set the mode dial to [] and press the **CARD/IN** button to select the erase source.


❷ Press the  button.

❸ Press the  or  button to select [ERASE SELECTED IMAGES] and press the **ENTER** button.

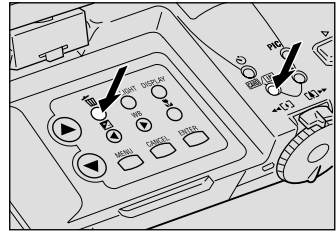


❹ Press the  or  button and the  or  button to select a file to be erased and press the **ENTER** button.

The selected file will be identified by the  mark. To select more files, repeat step ❸.

Note • To cancel selection, press the **ENTER** button again and the  mark will disappear.

❺ Press the shutter release button.

The selected files will be erased and the display will return to the erase menu.

Note • Protected files, which are identified by the  mark, cannot be erased until they are unprotected. See “Protecting a File” → (p.85).

